

SMARTT

AN INNOVATIVE PROCESS CONTROL FOR ROTARY DEGASSING OF ALUMINUM ALLOYS

- + For all FDU and MTS processes
- + Consistent treatment results
- + Suitable for degassing and upgassing
- + Operator independent parameter selection
- + Advanced treatment data recording

SMARTT

An innovative process control

SMARTT is a process control tool for the rotary degassing process of aluminium alloys. It analyzes all external variables and calculates the treatment parameters for degassing and upgassing processes just before each treatment. The target for the optimization is a consistent melt quality after each treatment.

The SMARTT software is installed on a Windows PC and data exchange is carried out on a comfortable touch screen panel. The SMARTT PC is LAN connected to the Siemens PLC that controls the degassing unit.

SMARTT continuously measures humidity and air temperature while data for the Foseco rotor designs are stored in a database. The hydrogen content at the end of the treatment is always the target for the optimization. Additionally, ingot quality, melt temperature or casting requirements influence the performance of a treatment process.

SMARTT determines rotor speed, inert gas flow rate and treatment time and transfers this data to the degassing unit before treatment begins.

Four different treatment schemes (high-speed, low gas consumption, low rotor speed or standard degassing) offer opportunities for the foundry manager to optimize his process in various ways.

SMARTT Properties

- + 20 programs on the operator screen
- + For MTS 1500 units with 1 or 2 dosing systems
- + Degassing to a hydrogen target
- + Upgassing with N₂-H₂ mixed gas
- + Data logging of all treatment parameters



Operator screen




Mass flow controllers



Overview

SMARTT Scheme

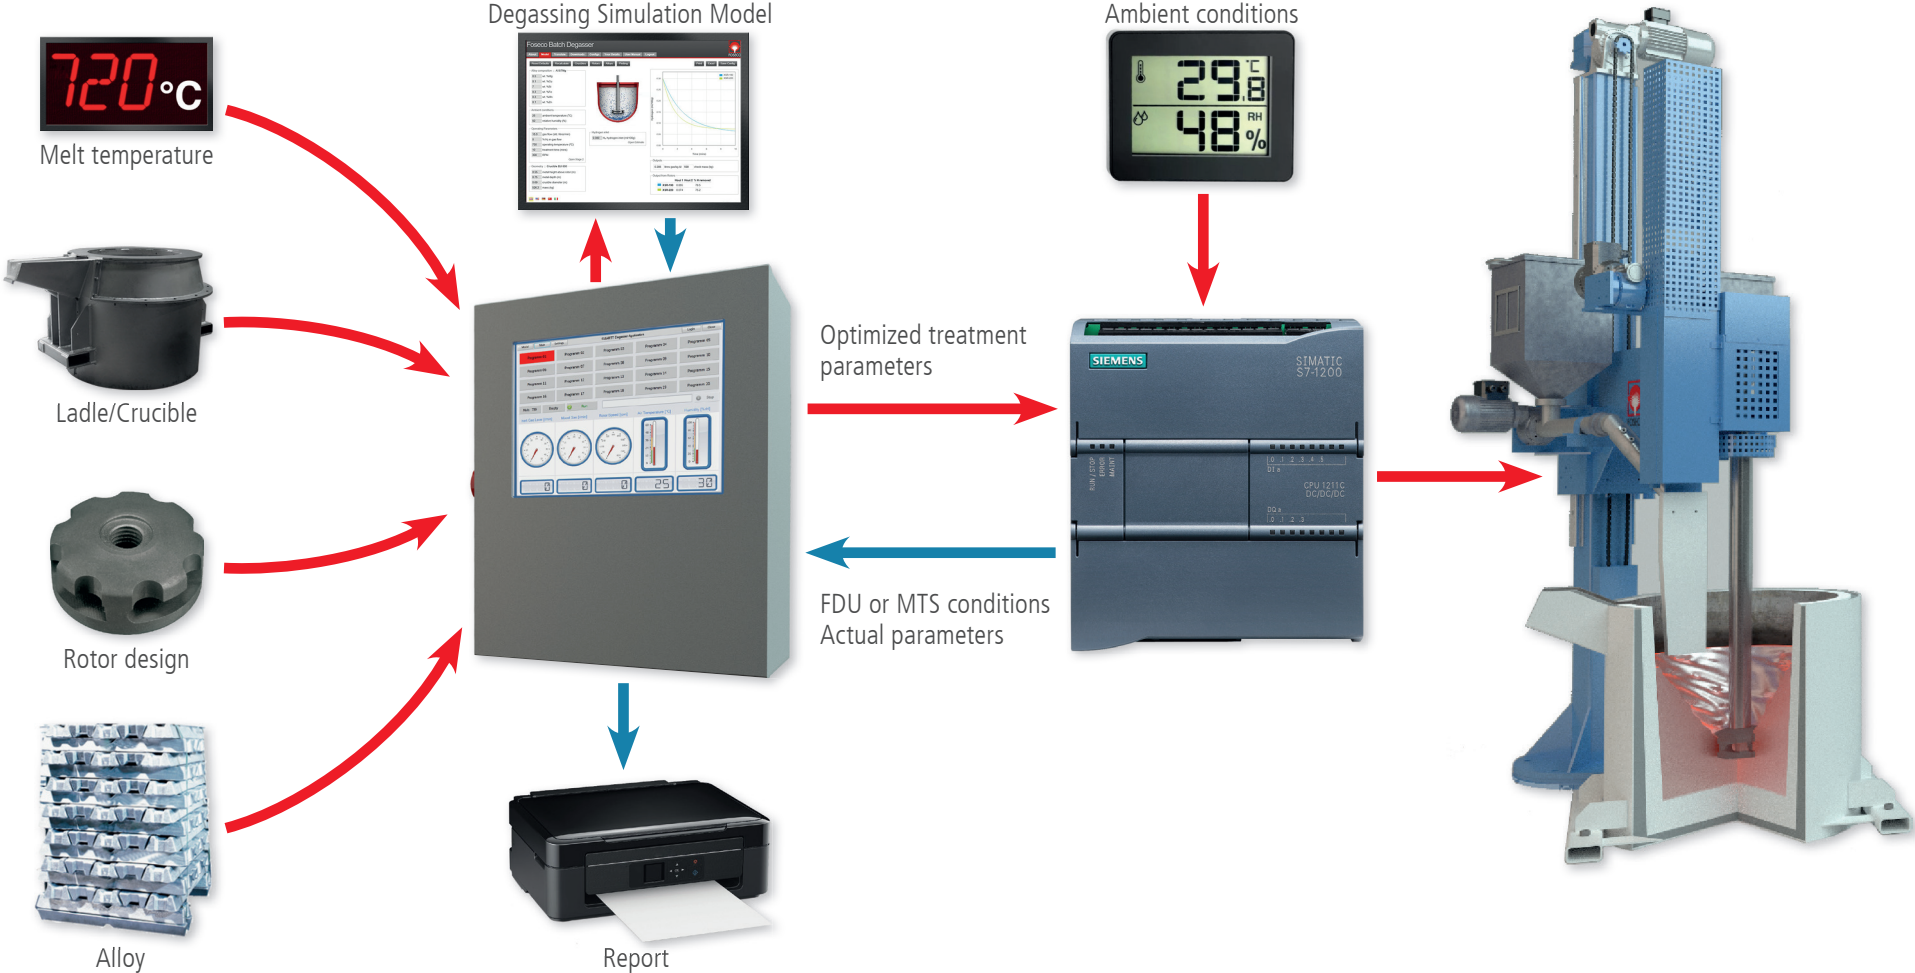

Results from simulations and trials

Degassing treatment

Optimizations: Standard
 BU 600 with AlSi8Cu3 at (1382°F) 750°C, XSR 190 rotor
 Treatment target: 0.06 ml H₂ / 100 g Al
 Minimum treatment time: 240 s
 Maximum treatment time: 500 s

SMARTT parameter for different ambient conditions:

20 °C / 25 % rH	Rotor Speed (RPM)	423	423
	Gas Flow (std. l/m)	19	19
	Process Time (s)	240	240
30 °C / 45 % rH	Rotor Speed (RPM)	431	431
	Gas Flow (std. l/m)	23	23
	Process Time (s)	240	240
40 °C / 65 % rH	Rotor Speed (RPM)	454	454
	Gas Flow (std. l/m)	29	29
	Process Time (s)	240	240

SMARTT calculates treatment parameters for different ambient conditions to reach 0.06 ml hydrogen per 100 g aluminum after each treatment. With increasing air temperature and relative humidity, the rotor speed and inert gas flow rate increase to compensate the higher moisture content in the atmosphere. If the flow rate and rotor speed are at its specific limit, the software starts prolonging the treatment time to reach the target.


Foundry trials have shown that the target was always reached regardless of different ambient conditions.

Uppassing treatment

Some applications in foundries require a defined hydrogen content such as in the casting of wheels. It is common practice to run very short treatment times to avoid too much hydrogen removal; often oxide removal is not sufficient. The use of a N₂-H₂ mixed gas improves oxide removal due to longer treatment times but the variations in hydrogen at the end of treatment are still high.

SMARTT now runs an inert gas treatment followed by a 2-stage uppasing. The 1st stage runs with N₂-H₂ mixed gas only; during stage 2 a mix between N₂-H₂ and inert gas gives a defined hydrogen content in treatment gas, aluminum melt and atmosphere.

Optimization: Standard
 INSURAL ATL 1000 with AlSi7Mg at 1382 °F (750°C), FDR 220 rotor
 Treatment target after degassing: 0.08 ml H₂/100 g Al
 Final treatment target: 0.15 ml H₂/100 g Al
 Minimum treatment time: 360 s
 Maximum treatment time: 600 s

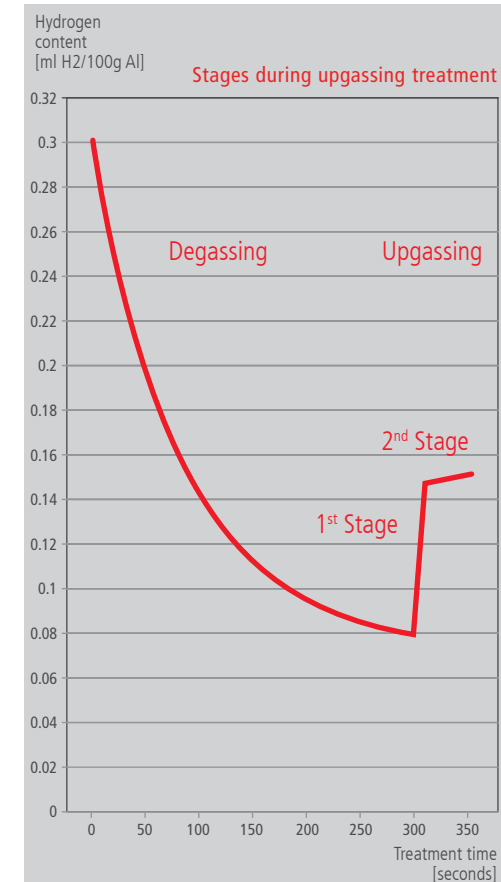

Complete treatment cycle including uppasing



*Foseco, the Logo and INSURAL are trade marks of the Vesuvius Group, registered in certain countries, used under license. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system of any nature or transmitted in any form or by any means, including photocopying and recording, without the written permission of the copyright holder or as expressly permitted by law. Applications for permission shall be made to the publisher at the address mentioned.

Warning: The doing of an unauthorized act in relation to a copyright work may result in both a civil claim for damages and criminal prosecution. All statement, information and data contained herein are published as a guide and although believed to be accurate and reliable (having regard to the manufacturer's practical experience) neither the manufacturer, licensor, seller nor publisher represents nor warrants, expressly or impliedly: (1) their accuracy/reliability, (2) that the use of the product(s) will not infringe third party rights, (3) that no further safety measures are required to meet local legislation. The seller is not authorized to make representations nor contract on behalf of the manufacturer/licensor. All sales by the manufacturer/seller are based on their respective conditions of sale available on request.

© Foseco International Limited 10/16.

COMMITTED TO FOUNDRIES

Foseco International Limited
 Drayton Manor Business Park,
 Tamworth, Staffordshire,
 England B78 3TL
 Phone: +44 (0)1827 262021
 Fax: +44 (0)1827 283725
 www.Foseco.com
 Please contact your local Foseco team